


## HomeCam Window 3MP WIFI IP CAMERA

Ref. 127170

Sticks to  
a window!

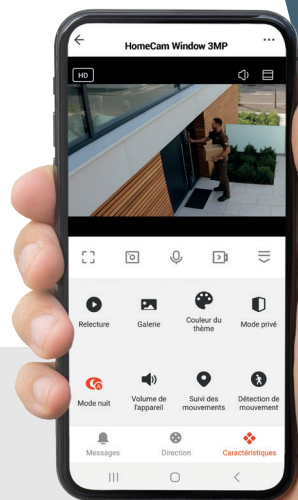

## SAFETY INSTRUCTIONS

### OPERATING PRECAUTIONS

---

- The camera must not be installed where the lens filter may be vulnerable to scratching and dirt.
- Do not expose the lens to direct sunlight or any reflected light source.
- Do not daisy-chain extension cords and/or multi-socket adapters.
- Do not install near acidic chemicals, ammonia or sources of toxic gases.
- The installation and use of the camera must comply with local laws.
- The camera is designed exclusively for indoor use.

### MAINTENANCE AND CLEANING

---

- Always unplug the product from the mains before carrying out any maintenance.
- Never use abrasive or corrosive substances to clean the product.
- Use a soft, slightly damp cloth.
- Never use an aerosol to spray the product as this may damage the internal workings.

### RECYCLING


---



This symbol means that devices no longer in use should not be disposed of with household waste. The hazardous substances they may contain can be harmful to health and the environment. Return the equipment to your local distributor or use the recycling collection service provided by your local council.




**1 - KIT CONTENTS**

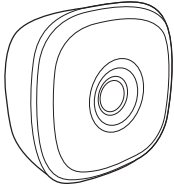


1 x1



 2 x1







3 x1

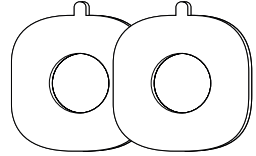

4 x2

1	Camera
2	230 VAC/5 VDC USB mains adapter
3	USB-C power cable
4	Double-sided tape (Velcro/glue)

**2 - CAMERA**

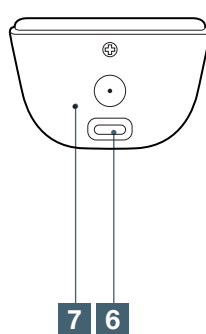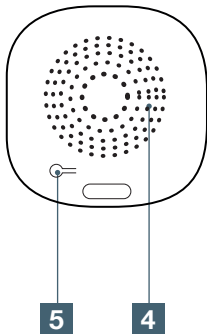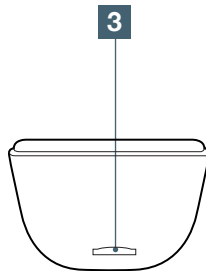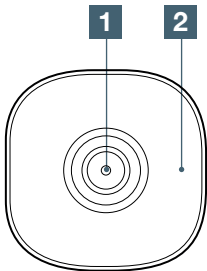

1	Camera lens
2	Scratch-off front panel
3	SD card slot
4	Loudspeaker
5	Reset button
6	USB charging port
7	Microphone

## INSTALLATION

### OPERATION


---

This camera will allow you to monitor your home and will alert you directly on your smartphone if motion is detected. You can also make photo and video recordings with this device using a micro SD card (not included).


### INSTALLING THE CAMERA

---


Position one of the two double-sided tapes supplied on the front of the camera (gripping side). Remove the central seal.

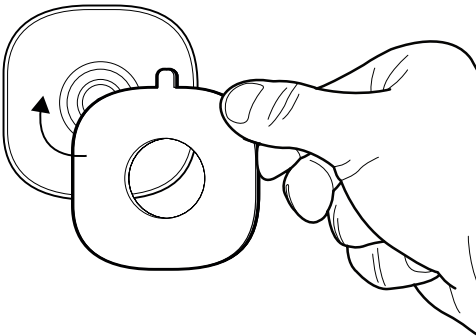

Position the camera where you want it on the window pane and press hard on the camera so that the sticker adheres well to the camera.

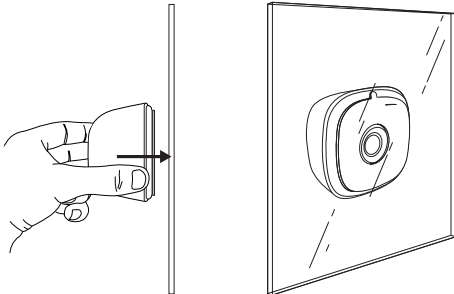


Plug the camera into an electrical socket. The camera will then play a melody. Wait a few seconds for it to connect.

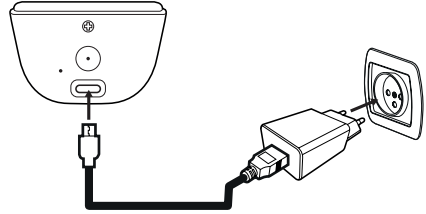

### INSTALLING THE MICRO SD CARD

---

Your camera has a micro SD card slot, which gives it an internal storage memory. The maximum size is 128 GB. This card is optional, but required if you wish the camera to record independently.

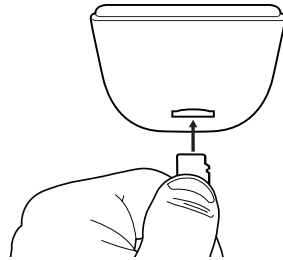

### INSTALLING THE MOBILE APP AND CREATING AN ACCOUNT

---

Once the camera is connected, follow the instructions below to pair it.

Download the **Avidsen Home** app from the Play Store or App Store.



AvidsenHome




## CONNECTING THE CAMERA

If you have more than one item to pair (plugs, cameras, other bulbs), switch on only one item at a time.


The following information may vary depending on app updates.

A message may also appear during installation indicating that the WiFi password and SSID are too long. Make sure your router SSID and password are fewer than 20 characters long.

To start the installation, press **AJOUTER (ADD)**. Bluetooth must be activated on your phone or tablet.

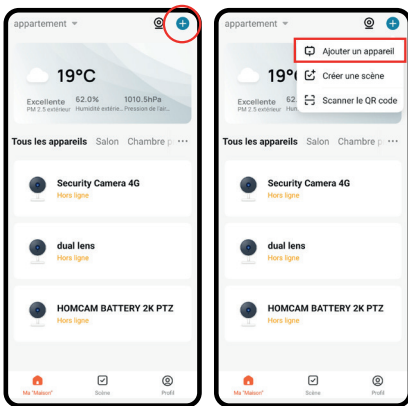

The product will appear at the top of the screen, press **AJOUTER (ADD)**.

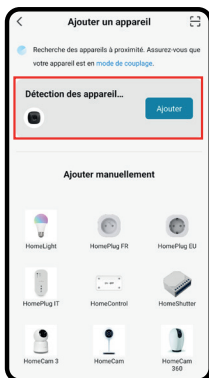


Select your WiFi network.

(Please note: your smartphone must be connected to the same WiFi network the camera will be connected to)

- If the application does not detect the camera, perform an electrical reboot of the camera.
- If the camera remains invisible, go to the settings on your smartphone and check that all the authorisations for the **Avidsen Home** application have been granted.

Enter your password (WiFi key) and click on **SUIVANT (NEXT)**.

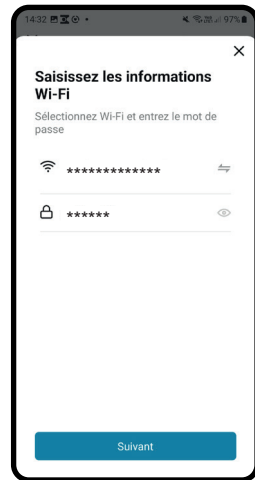

Please wait while the connection procedure takes place. This can take a few minutes.

If the information transmitted is correct, the camera will beep 3 times, indicating that it is connected to the WiFi network.

In the event of a connection error:

- Wrong WiFi key: No reaction from the camera. The application will say **“Échec de l’ajout de l’appareil” (Failed to add device)**.

Click on the cross at the top left and continue uploading the camera, having reset the camera first.

Your camera has been successfully paired. You can set a name by tapping the pencil and pressing **TERMINE (Finished)**.


### RESETTING THE CAMERA

---

The following instructions may help you if you have any problems during the pairing procedure:

To **reset** the camera, press the **RESET** button for 15 seconds. The camera will beep 3 times to confirm that the operation was successful. After a few seconds, the camera will play its start-up melody.

You can then start the procedure for putting the camera online. **Please note that a reset does not delete the camera from the application.**

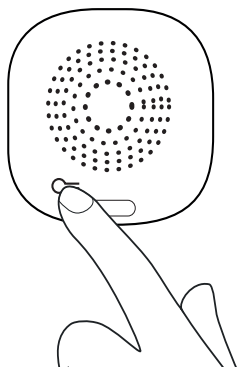


Deleting the camera from the app resets it. The camera will beep a few seconds after it has been deleted from the app. To do this, tap the 3 dots at the top right of your screen.

Once in **Paramètres (Settings)**, scroll down to the bottom of the interface and select **Enlevez l'appareil (Remove device)**.

### RECORDING WITH A MICRO SD CARD

---

A micro SD card is required if you wish to create a continuous recording or a recording triggered by motion detection.

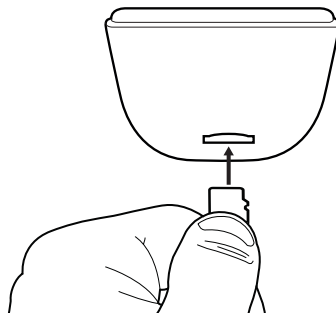

Insert the SD card into the camera, then go to the SD card settings. Click on **Formatage de la carte SD (Format SD card)** to initialise the SD card.

TECHNICAL FEATURES

Resolution	2K
Technical features	Power supply: 5 V Real-time video feed Communication protocol: WiFi b/g/n 2.4 GHz Encryption: WPA-PSK/WPA2 Max EIRP 20 dBm
Audio	Two-way
Night vision	Yes, 10 m range
Sensor and lens	1/4" CMOS
Shutter speed and compression	1/25 – 1/100,000 per second - H264
Storage	Yes, on SD card (128 GB max, not included)
Consumption	10 W max. DC 5 V, 2 A < 2W on standby
Operating temperature	-20°C + 55°C
Dimensions and weight	55 mm x 55 mm x 36 mm - 35 g

WARRANTY

- This product is guaranteed for parts and labour for 3 years from the date of purchase. Proof of purchase must be retained for the duration of the warranty period.
- The warranty does not cover damage caused by negligence, knocks, or accidents. The parts of this product must not be opened or repaired by any persons not employed by Avidsen. The warranty will be void if the device is tampered with.
- Avidsen undertakes to keep a stock of spare parts for this product throughout the contractual warranty period.

ASSISTANCE AND ADVICE



If you have any problems, check out our tutorials and videos at [www.avidsen.com/fr](http://www.avidsen.com/fr)

EXTEND THE EXPERIENCE

Visit [www.maisonic.com](http://www.maisonic.com) and our usual dealers for a full range of spare parts, compatible accessories and smart solutions to enhance your connected ecosystem. Give your installation a new dimension by improving its performance and longevity, while imagining a home that is ever more practical, safe and connected. Perfectly compatible products, designed to meet the demands of modern, efficient and sustainable living. With **Maisonic** and the **Avidsen** network, your installation can evolve without limit.

### EU DECLARATION OF CONFORMITY

---

Avidsen hereby declares that the equipment designated below:  
Avidsen HomeCam Window 3MP reference 127170 complies with the RED 2014/53/EU directive and that its conformity has been assessed pursuant to applicable standards:

Directive 2014/35/EU: (protection of users' health and safety).

- EN62368-1:2020+A11:2020

- EN62311:2020

Directive 2014/30/EU: (protection requirements relating to electromagnetic compatibility).

- EN301489-1 V2.2.3 (2019-11)

- EN301489-17 V3.3.1 (2024-09)

- EN61000-3-2:2019+A1:2021

- EN61000-3-3:2013+A2:2021

Directive 2014/53/EU: (efficient use of the radio spectrum, in order to avoid harmful interference).

- EN300328 V2.2.2 (2019-07)

Tours, 5/05/2026

Alexandre Chaverot, CEO



Séparez les éléments avant de trier

### EU REGULATION 2023/2854E

Use of data in accordance with REGULATION (EU) 2023/2854		
Type	Audio/video, images, motion detection events, connection status, device configuration	
Format	Collected in JSON format; stored in MySQL tables; exported in XLS format	
Volume	~50MB (depends on bit rate and reporting frequency)	
Is data generated	Continuously (with latency time)	/
	In real time	Only during a user operation or automatic triggers
Where is the data stored	Europe	
Data retention period	1.Real-time activity logs: pseudonymised after 7 days, stored for a maximum of 12 months. 2. Account-level data: stored until the user deletes the account	
How to	Access data	1. In the application: review the app's privacy policy 2. Web: submit a request to <a href="https://www.avidSEN.com">https://www.avidSEN.com</a>
	Extract data	
	Delete data	
	Share data	
	Stop sharing	
Data subject's identity (contact details)	<a href="https://www.avidSEN.com">https://www.avidSEN.com</a> Address: 19 avenue Marcel Dassault -37200 Tours- FRANCE Contact: <a href="mailto:hotline@avidSEN.com">hotline@avidSEN.com</a>	