



## 433 MHz remote-controlled socket kit

Ref. 701003



EN

**CASA**

## Remote-controlled socket 433 MHz

Ref. 701001



HOTLINE

**2** YEARS

WARRANTY

# INSTALLATION AND USER MANUAL



Thank you for  
purchasing a **CASA**  
product.



## 1 - OPERATING PRECAUTIONS

- Do not allow children to operate the product.
- This product is designed exclusively for indoor use.
- This product is designed to be used with an EXTEL CASA remote control.
- Do not use this product to control an extension block.
- Do not install near acidic chemicals, ammonia or sources of toxic gases.
- Do not install near other electronic devices such as computers, televisions or video recorders.

## 2 - MAINTENANCE AND CLEANING

- Unplug the remote-controlled socket from the wall socket before carrying out any maintenance.
- Your product does not require any specific maintenance.
- Use a soft, slightly damp cloth to clean your product.
- Do not use abrasive or corrosive substances.
- Do not spray any products directly onto the unit

## 3 - RECYCLING



The disposal of used batteries in household waste is strictly forbidden. Batteries/accumulators containing harmful substances are marked with symbols (shown opposite) which indicate that it is forbidden to discard them in the household waste. The corresponding heavy metals are referred to as follows: Cd = cadmium, Hg = mercury, Pb = lead. You can dispose of these used batteries/accumulators at local waste facilities (centres for sorting recyclable materials), which are required to accept them. Keep batteries/button cells/accumulators out of reach of children and store them in a safe place not accessible to them. They could be swallowed by children or pets. Risk of death! In the event that a battery is swallowed, consult a doctor or go to A&E immediately. Never short-circuit the batteries, and do not burn or recharge them, as they may explode!




This symbol means that devices no longer in use should not be disposed of with household waste. The hazardous substances they may contain can be harmful to health and the environment. Return the equipment to your local distributor or use the recycling collection service provided by your local council.




KIT 701001

 1 x1

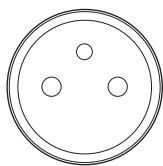


KIT 701003

 1 x4

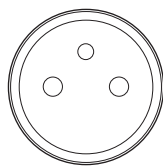


2 x1

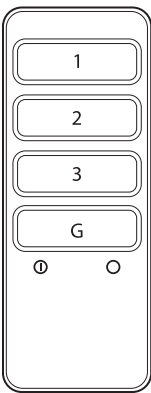 

3 x1





|   |                                  |
|---|----------------------------------|
| 1 | 433 MHz remote-controlled socket |
| 2 | 433 MHz remote control           |
| 3 | CR2032 battery                   |

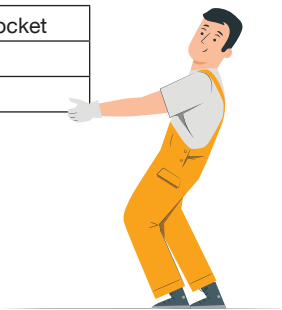 



## C - FITTING THE BATTERY INTO THE REMOTE CONTROL

To open the battery compartment cover, insert a coin into the slot provided and turn it anticlockwise.

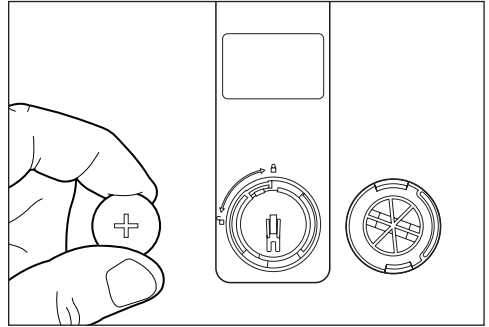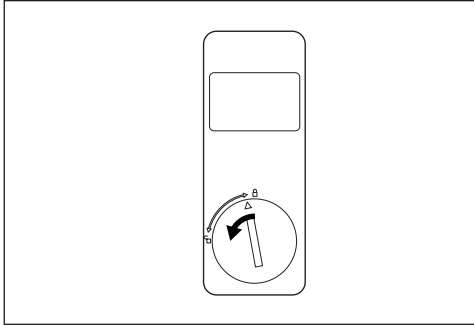

Put the battery compartment cover back on and use a coin to lock it in place by turning it clockwise.

Remove the battery compartment cover. To do this, turn the remote control over and tap it gently against your other hand to dislodge the cover.

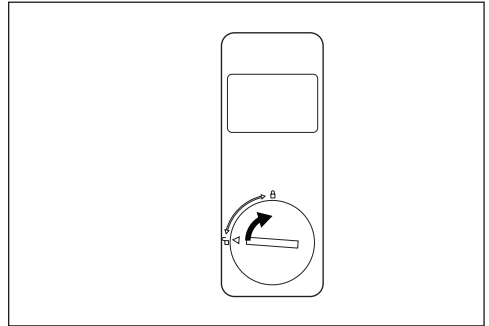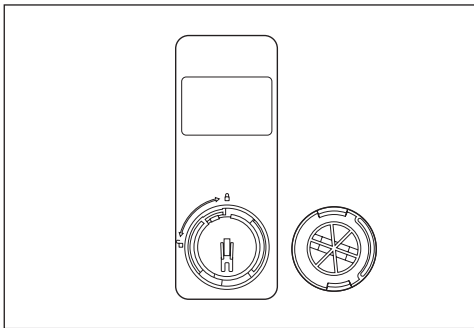

**Note:** Before using the product for the first time, remove the insulator pad before using it as normal.

Insert a new 3V CR2032 battery, making sure the “+” symbol is facing upwards.


## D - PAIRING/UNPAIRING/SOCKET MEMORY RESET

 If your lamp or product has an ON/OFF switch, set the switch to ON.


### 1. PAIRING THE REMOTE CONTROL WITH THE SOCKET

To pair your remote control with your socket:

- **Step 1:** Plug a lamp into the remote-controlled socket, then plug the whole thing into your wall socket.

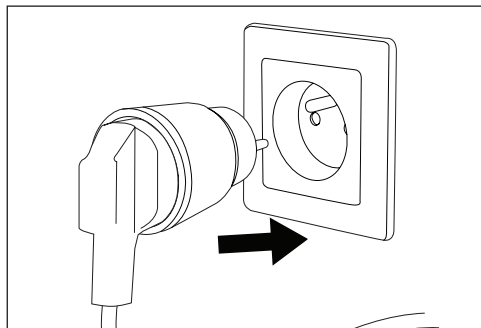

 - **Step 2:** Press the “ON” button on the remote control straight away.

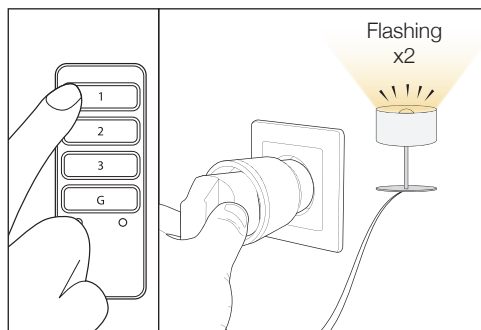

**Result:** The lamp flashes twice.  
The remote control is paired with the socket.


**Note 1:** If you wait longer than 6 seconds, pairing will fail. You will need to unplug the device from the wall socket, wait 6 seconds and try again.

**Note 2:** The socket has 32 memory slots. When full, the socket operates on a “first in, first out” basis.


### 2. HOW TO UNPAIR THE REMOTE CONTROL FROM THE SOCKET

To stop the remote control from operating the desired socket:


- **Step 1:** Unplug the device from the wall socket and wait 6 seconds.

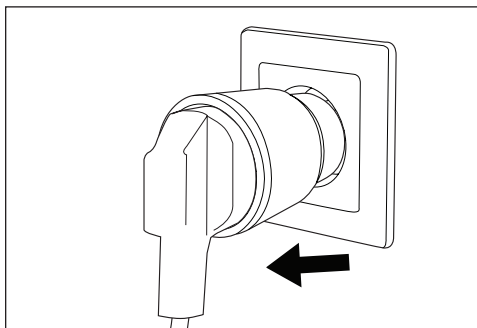

 - **Step 2:** Plug a lamp into the remote-controlled socket and plug the socket back into the wall.

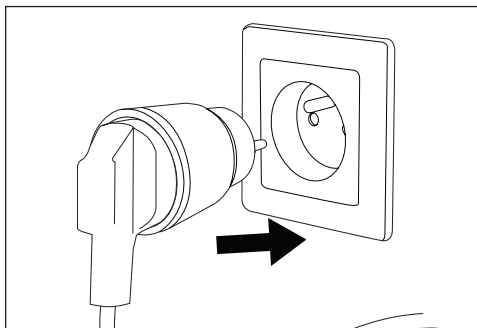

- **Step 3:** Press the “OFF” button on the remote control straight away.

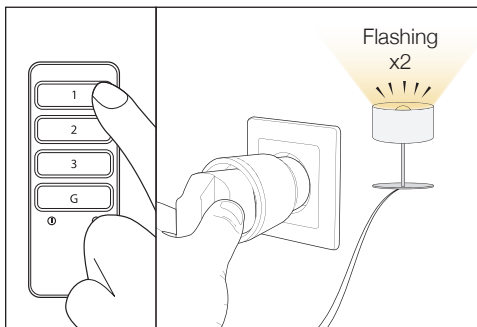


**Result: The lamp flashes twice.  
The remote control is disconnected.**

**Note:** If you wait longer than 6 seconds, the operation will fail. You will need to unplug the device from the wall socket, wait 6 seconds and try again.


### **3. HOW TO CLEAR THE SOCKET'S MEMORY (RESET)**

 To delete all remote controls stored in the socket's memory:


- **Step 1:** Unplug the device from the wall socket and wait 6 seconds.

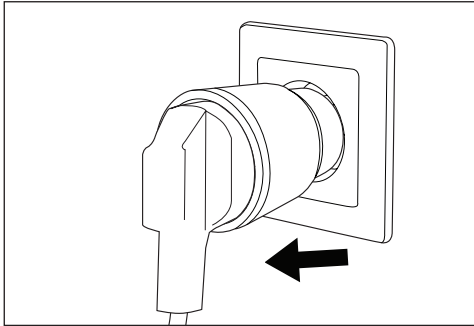

 - **Step 2:** Plug it back into the wall socket.

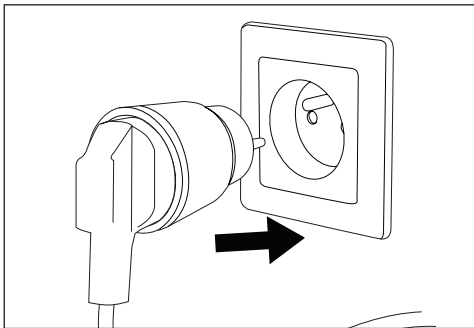

 
- **Step 3:** Press the "ALL OFF" button (or G "O") on the remote control straight away.

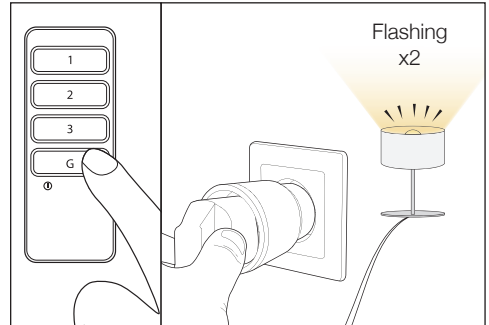


**Result: The lamp flashes twice.  
All remote controls have been deleted from the socket's memory.**

## 1. ON/OFF

Press the ON or "I" button of the channel with which the socket is paired to switch on the lamp or device.

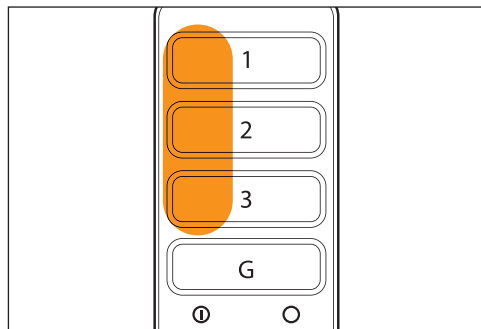


Press the OFF or "O" button of the channel with which the socket is paired to switch off the lamp or device.

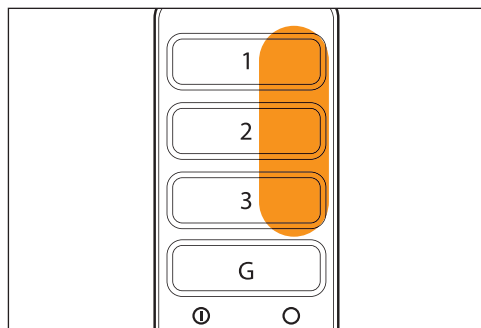


## 2. GROUP ON/OFF

Press the group ON or G "I" button on the remote control to switch on all the lamps or devices that have been paired with the remote control.

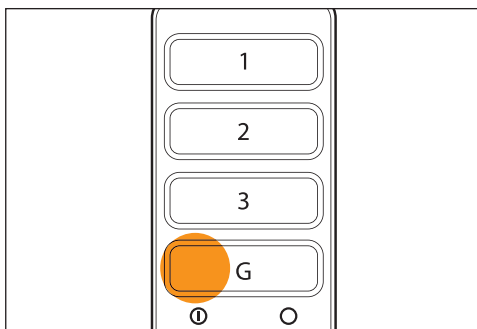

Press the group OFF or G "O" button on the remote control to switch off all the lamps or devices that have been paired with the remote control.

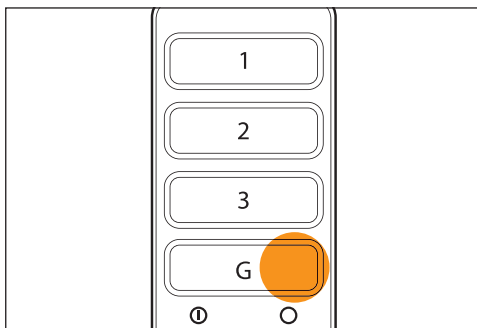





| TECHNICAL SPECIFICATIONS OF THE SOCKET |                                                                                                                                   |
|----------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------|
| INSTALLATION                           | On 220-240 V-50 Hz outlet                                                                                                         |
| FREQUENCY                              | Receiver: 433.92 MHZ                                                                                                              |
| MAX. POWER                             | 2.300 W (resistive load)                                                                                                          |
| SOCKET TYPE                            | Type E                                                                                                                            |
| USE                                    | Indoor                                                                                                                            |
| COMPATIBLE BULBS AND LAMPS             | Incandescent: 2.300 W<br>LED: 300 W<br>Halogen: 2.300 W<br>Compact fluorescent: 100 W<br>Not compatible with dimmable lamps/bulbs |
| SOCKET SIZE                            | Diam. 44,5 mm x Length 75 mm                                                                                                      |
| WEIGHT                                 | 62 g                                                                                                                              |
| OPERATING TEMPERATURE RANGE            | 0 to 35°C:                                                                                                                        |
| STANDBY CONSUMPTION                    | ·1 W                                                                                                                              |
| STANDARD AND CERTIFICATION             | CE, RoHS                                                                                                                          |

| TECHNICAL SPECIFICATIONS OF THE REMOTE CONTROL |                                              |
|------------------------------------------------|----------------------------------------------|
| DISTANCE                                       | 50 m in open space                           |
| FREQUENCY                                      | 433.92 MHZ                                   |
| MAX RADIO POWER                                | ERP 10 dBm                                   |
| USE                                            | Indoor                                       |
| CONTROL                                        | 3 On/Off buttons and 1 master On/Off switch  |
| POWER SUPPLY                                   | Runs on one 3 V CR2032 battery (included).   |
| REMOTE CONTROL SIZE                            | Height 90 mm x Width 35 mm x Thickness 11 mm |
| WEIGHT                                         | 23,4 g                                       |
| OPERATING TEMPERATURE RANGE                    | 0 to 35°C:                                   |
| STANDARD AND CERTIFICATION                     | CE, RoHS                                     |

|                                            |                 |                                                                                                                                                 |
|--------------------------------------------|-----------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| THE LIGHT OR THE DEVICE<br>WON'T SWITCH ON | Power supply    | Make sure the remote-controlled socket is properly plugged into a live mains outlet.                                                            |
|                                            | Remote control  | Check the battery for signs of wear and ensure that the correct polarity (+/-) is observed when inserting it.                                   |
|                                            | Device switch   | Check that the mechanical switch on your lamp or device is set to the "ON" position.                                                            |
|                                            | Safety distance | To avoid any interference, keep a minimum distance of 1 to 2 metres between two remote-controlled sockets.                                      |
|                                            | Signal range    | The maximum range between the remote control and the socket may be reduced by thick walls or other wireless equipment (WiFi, Bluetooth) nearby. |

### 1 - WARRANTY

---

- The warranty is void if parts have been dismantled. Clean the outside with a soft, dry cloth only. Before cleaning, disconnect or switch off the device.

#### PLEASE NOTE

- Do not use any carboxylic acid, alcohol, or similar chemicals on the product. In addition to damaging your device, the fumes are also hazardous to your health and are explosive.
  - Do not use any tool that can conduct voltage (wire brush, sharp tool, etc.) for cleaning.
- If needed, visit our technical website: [www.avidsen.com](http://www.avidsen.com)

Download the latest version of the instructions in colour from: [www.avidsen.com](http://www.avidsen.com)

### 2 - WARRANTY CONDITIONS

---

- This product is guaranteed for parts and labour in our workshops.
- The warranty does not cover: consumables (batteries, etc.) and damage caused by misuse, improper use, improper installation, external intervention, damage due to physical or electrical shocks, dropping or atmospheric phenomena.
- Do not open the device, as this will void the warranty.
- Clean with a soft cloth only, no solvents. The warranty is void if parts have been dismantled. Clean the outside with a soft dry cloth only. Before cleaning, disconnect the equipment or switch it off at the mains.
- The receipt or invoice is proof of purchase date.

If you experience any issues, please visit:

[www.avidsen.com](http://www.avidsen.com) — Support section



**Avidsen**, undersigned, states that radio equipment  
such as the EXTEL CASA 701001 - 701003 is  
compliant with Directive 2014/53/EU

Standards:

**701005 socket**

EN 300 220-1 V3.1.1 (2017-02)  
EN 300 220-2 V3.2.1 (2018-06)  
EN 301 489-1 V2.2.0 (2017-03)  
EN 301 489-3 V2.1.1 (2017-03)  
EN 62479:2010  
EN 55015:2013+A1:2015  
EN 61547:2009  
EN 61000-3-2:2014  
EN 61000-3-2:2013

**Remote control**

EN 62368-1:2014+A11:2017  
EN 301 489-1 V2.2.3 (2019-11)  
EN 301 489-3 V2.3.2 (2023-01)  
EN 50663:2017  
EN 62479:2010  
EN 300 220-1 V3.1.1 (2017-02)  
EN 300 220-2 V3.2.1 (2018-06)

Tours, 18/06/2026  
Alexandre Chaverot, CEO



**EXTEL**  
**CASA**

19 avenue Marcel Dassault  
ZAC des Deux Lions - 37200 Tours - France  
[www.avidsen.com](http://www.avidsen.com)