CASA

EXTEL


V1

Kit containing 1 remote-controlled light socket

E27 - 433 MHz - With remote control

Ref. 701205

EN

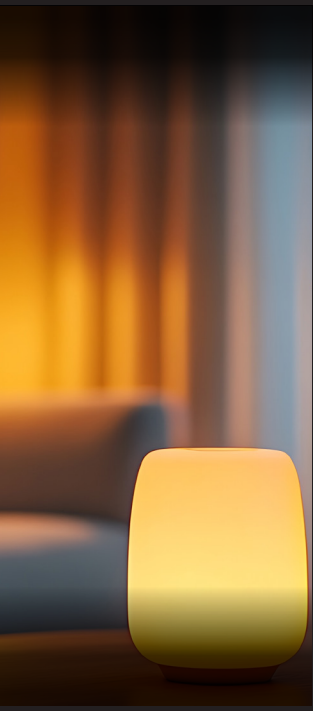



CASA

HOTLINE

2 YEARS WARRANTY

INSTALLATION AND USER MANUAL





Thank you for purchasing the **CASA remote-controlled E27 light socket kit.**

1 - OPERATING PRECAUTIONS

- Do not allow children to operate the product.
- This product is designed exclusively for indoor use.
- This product is designed for use with EXTEL CASA products.
- Do not install near acidic chemicals, ammonia or sources of toxic gases.
- Do not install near other electronic devices such as computers, televisions or video recorders.

2 - MAINTENANCE AND CLEANING

- Remove the remote-controlled light socket from the light fixture before carrying out any maintenance.
- Use a soft, slightly damp cloth to clean your product.
- Do not use abrasive or corrosive substances.
- Do not spray any products directly onto the unit

3 - RECYCLING



The disposal of used batteries in household waste is strictly forbidden. Batteries/accumulators containing harmful substances are marked with symbols (shown opposite) which indicate that it is forbidden to discard them in the household waste. The corresponding heavy metals are referred to as follows: Cd = cadmium, Hg = mercury, Pb = lead. You can dispose of these used batteries/accumulators at local waste facilities (centres for sorting recyclable materials), which are required to accept them. Keep batteries/button cells/accumulators out of reach of children and store them in a safe place not accessible to them. They could be swallowed by children or pets. Risk of death! In the event that a battery is swallowed, consult a doctor or go to A&E immediately. Never short-circuit the batteries, and do not burn or recharge them, as they may explode!



This symbol means that devices no longer in use should not be disposed of with household waste. The hazardous substances they may contain can be harmful to health and the environment. Return the equipment to your local distributor or use the recycling collection service provided by your local council.




B - KIT CONTENTS

1 x1




2 x1

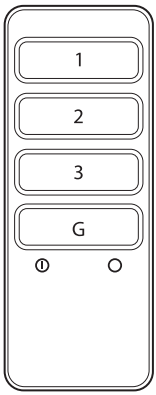

3 x1




1	E27 smart light socket
2	433 MHz remote control
3	CR2032 battery

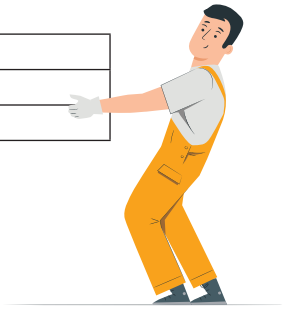


C - FITTING THE BATTERY INTO THE REMOTE CONTROL


To open the battery compartment cover, insert a coin into the slot provided and turn it anticlockwise.

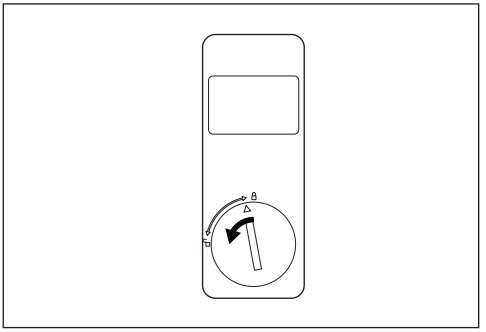

Remove the battery compartment cover. To do this, turn the remote control over and tap it gently against your other hand to dislodge the cover.

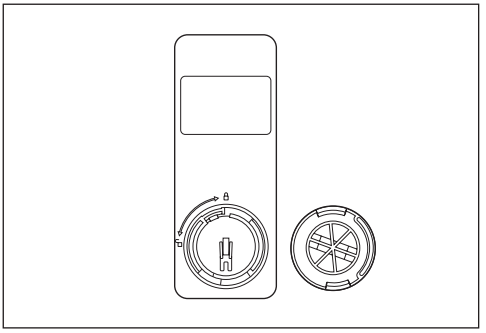


Note: Before using the product for the first time, remove the insulator pad before using it as normal.

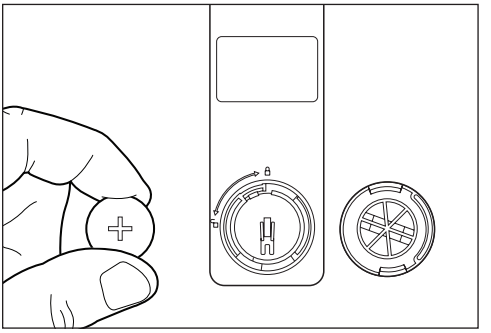

Insert a new 3V CR2032 battery, making sure the “+” symbol is facing upwards.

Put the battery compartment cover back on and use a coin to lock it in place by turning it clockwise.

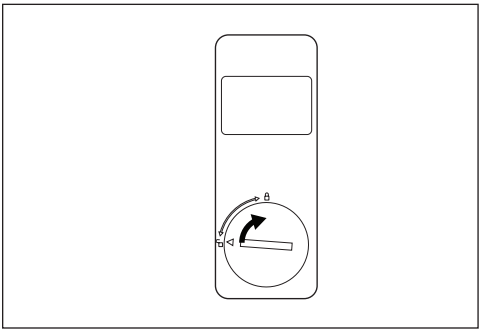


D - FITTING THE E27 LIGHT SOCKET AND PAIRING WITH THE REMOTE CONTROL


Warning 1: Risk of electric shock. If in doubt, or if you are not a qualified professional, please call upon a technician or expert before carrying out any work. Do not attempt to intervene unless you are fully familiar with the safety procedures.

Warning 2: This light socket must only be fitted in a properly ventilated light fixture. Inadequate ventilation may lead to heat buildup, thus compromising the product's proper functioning and safety. Do not fit this light socket in enclosed or semi-enclosed light fixtures.


COMPLIANT LAMP TYPES

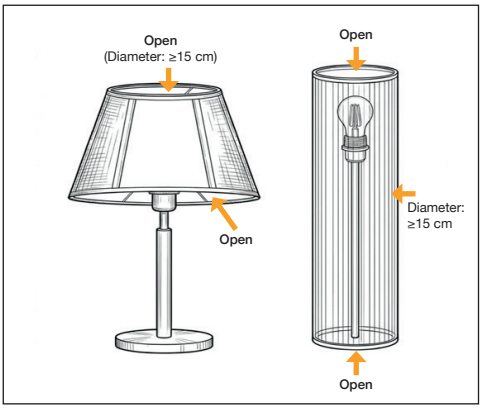

NON-COMPLIANT LAMP TYPES

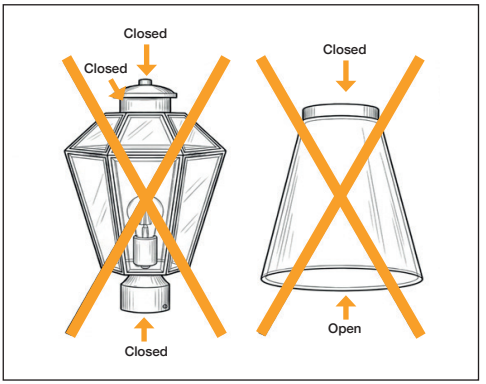

Before fitting the light socket into the light fixture, switch off the power supply at the main electrical panel.

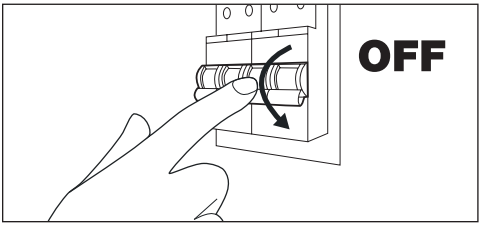


Screw the LED bulb into the E27 light socket, then screw the whole thing onto the light fixture.




Switch on the power (main electrical panel) to continue with the installation.

PLEASE NOTE: Risk of electric shock! Do not unscrew the E27 light socket or the bulb from the light fixture.

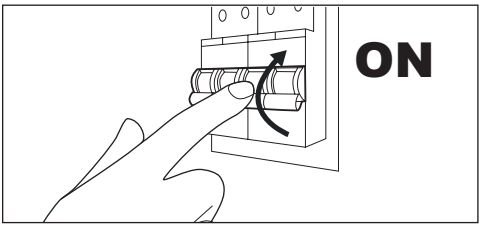


Switch on the light fixture, or plug it into a socket.

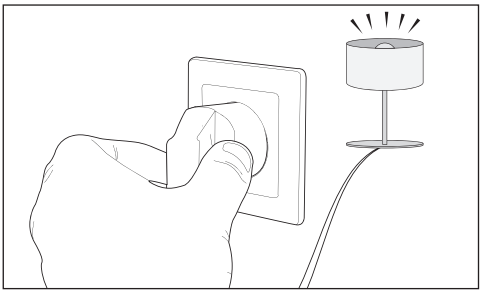

Then press the “ON” button for the desired channel (1/2/3) on the remote control within the next 6 seconds; the light will flash twice to confirm that the remote control has been paired.

Example: If you wish to pair the light socket with channel 1. When switching on the light socket, press the “ON” button for channel 1 on your remote control.

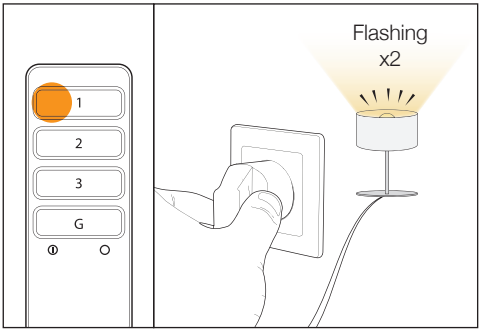

Note 1: Once the light socket has been switched on, you have a maximum of 6 seconds to press the remote control. Once this time has elapsed, you will need to switch off the light socket, wait 6 seconds, and then switch the power back on.

Note 2: The light socket has 32 memory slots. When the memory is full, the oldest remote control will be deleted to make room for the new one.


E - PROCEDURE FOR UNPAIRING THE REMOTE CONTROL FROM THE LIGHT SOCKET

To stop the remote control from operating the desired light socket:

1: Unplug the light fixture from the wall socket and wait 6 seconds.

2: Plug the light fixture back into the wall socket.

3: Press the “OFF” button on the remote control straight away.

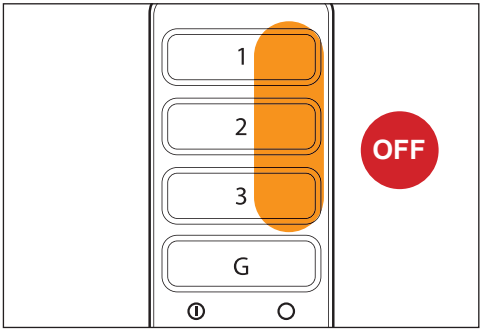

Result: The light bulb flashes twice.
The remote control is disconnected.

Note 1: Once the light socket has been switched on, you have a maximum of 6 seconds to press the remote control. Once this time has elapsed, you will need to switch off the light socket, wait 6 seconds, and then switch the power back on.


Example: If you wish to unpair the light socket from channel 1. When switching on the socket, press the “OFF” button for channel 1 on your remote control.

F - PROCEDURE FOR CLEARING THE LIGHT SOCKET'S MEMORY (RESET)

To delete all remote controls stored in the light socket’s memory:
1: Unplug the light fixture from the wall and wait **6 seconds**.

2: Plug the light fixture back into the wall socket.

3: Press the **“ALL OFF”** button (or G “O”) on the remote control straight away.

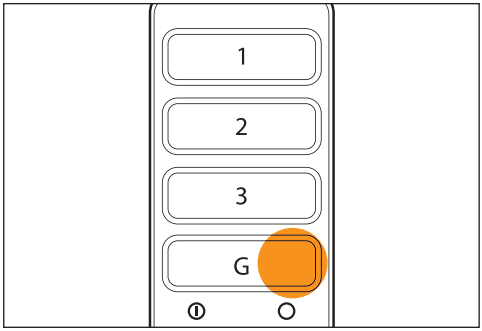


Result: The lamp flashes twice.
All remote controls have been deleted from the light socket’s memory.

G - OPERATING THE REMOTE CONTROL

1. ON/OFF OPERATION


Switch on the paired light socket: Press the ON or “I” button on the remote control to switch on the bulb.


Note: You must press the ON button for the channel with which the product is paired.

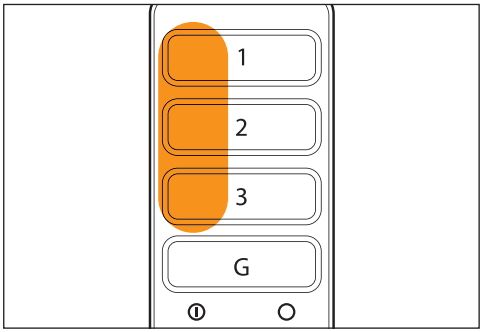

Switch off the paired light socket: Press the OFF or “O” button on the remote control to switch off the lamp or the device.

Note: you must press the OFF button for the channel with which the product is paired.

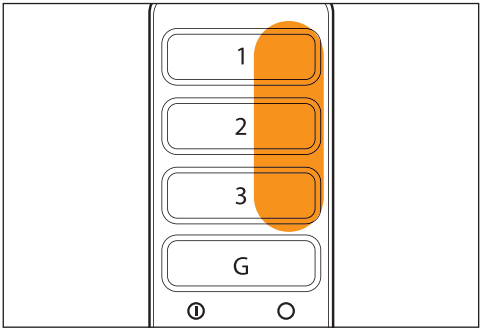


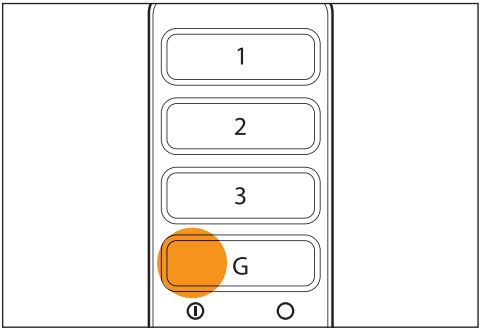


2. GROUPED ON/OFF OPERATION


Grouped ON/OFF: Press the grouped ON or G “I” button on the remote control to switch on all the lamps or devices that have been paired with the remote control.

Press the grouped OFF or G “O” button on the remote control to switch off all the lamps or devices that have been paired with the remote control.

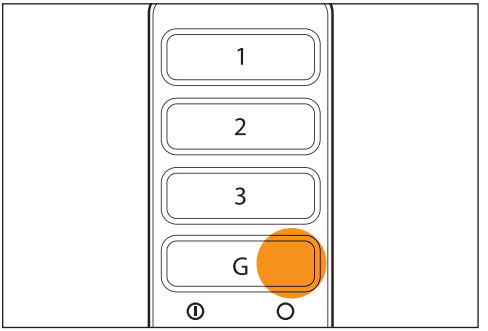

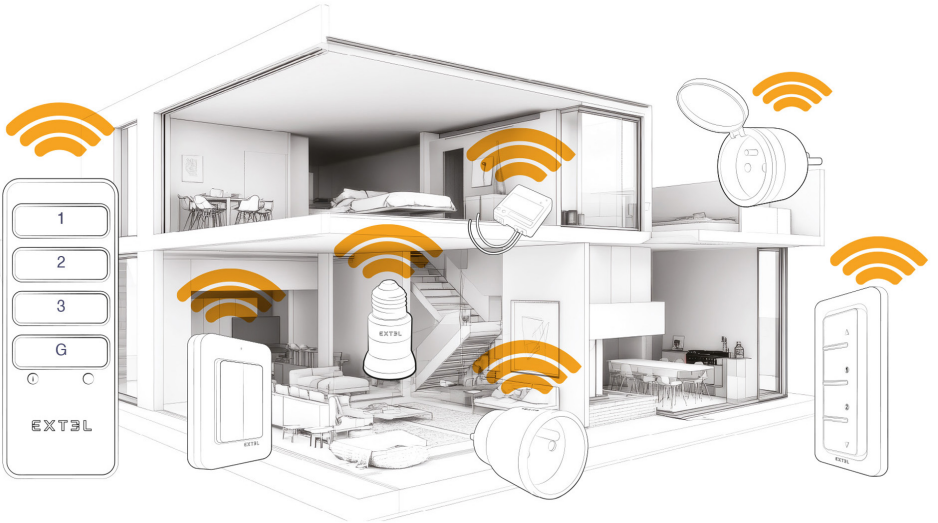

F - TECHNICAL SPECIFICATIONS

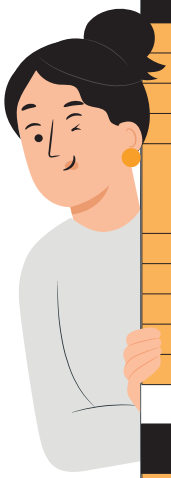

TECHNICAL SPECIFICATIONS OF THE LIGHT SOCKET	
INSTALLATION	For E27 light socket, 220-240 V-50 Hz
FREQUENCY	Receiver: 433.92 MHz
MAX. POWER	24 W
USE	Indoor
COMPATIBLE BULB AND LAMP	Incandescent: 100 W LED: 24 W Halogen: 100 W Compact fluorescent: Not compatible
DIMENSIONS	Diam. 39 mm x Length 69 mm
WEIGHT	26 g
OPERATING TEMPERATURE RANGE	0 to 35°C:
STANDBY CONSUMPTION	<1 W
STANDARD AND CERTIFICATION	CE, RoHS

TECHNICAL SPECIFICATIONS OF THE REMOTE CONTROL	
DISTANCE	50 m in open space
FREQUENCY	433.92 MHz
MAX RADIO POWER	ERP 10 dBm
USE	Indoor
CONTROL	3 On/Off buttons and 1 master On/Off switch
POWER SUPPLY	Runs on one 3 V CR2032 battery (included).
DIMENSIONS	Height 90 mm x Width 35 mm x Thickness 11 mm
WEIGHT	23.4 g
OPERATING TEMPERATURE RANGE	0 to 35°C:
STANDARD AND CERTIFICATION	CE, RoHS

G - FAQ

THE LIGHT OR THE DEVICE WON'T SWITCH ON	Power supply	Make sure the remote-controlled light socket is properly plugged into a live light socket.
	Remote control	Check the battery for signs of wear and ensure that the correct polarity (+/-) is observed when inserting it.
	Device switch	Check that the mechanical switch on your lamp or device is set to the "ON" position.
	Safety distance	To avoid any interference, keep a minimum distance of **1 to 2 metres** between two remote-controlled sockets.
	Signal range	The maximum range between the remote control and the socket may be reduced by thick walls or other wireless equipment (WiFi, Bluetooth) nearby.

H - WARRANTY

1 - WARRANTY

- The warranty is void if parts have been dismantled. Clean the outside with a soft, dry cloth only.
Before cleaning, disconnect or switch off the device.

PLEASE NOTE
- Do not use any carboxylic acid, alcohol, or similar chemicals on the product. In addition to damaging your device, the fumes are also hazardous to your health and are explosive.
- Do not use any tool that can conduct voltage (wire brush, sharp tool, etc.) for cleaning.

If needed, visit our technical website: ***www.avidsen.com***

Download the latest version of the instructions in colour from: ***www.avidsen.com***

2 - WARRANTY CONDITIONS

- This product is guaranteed for parts and labour in our workshops.
- The warranty does not cover: consumables (batteries, etc.) and damage caused by misuse, improper use, improper installation, external intervention, damage due to physical or electrical shocks, dropping or atmospheric phenomena.
- Do not open the device, as this will void the warranty.
- Clean with a soft cloth only, no solvents. The warranty is void if parts have been dismantled. Clean the outside with a soft dry cloth only. Before cleaning, disconnect the equipment or switch it off at the mains.
- The receipt or invoice is proof of purchase date.

If you experience any issues, please visit:
www.avidsen.com — Support section

I - DECLARATION OF CONFORMITY



Avidsen, undersigned, states that radio equipment such as the EXTEL CASA 701205 is compliant with Directive 2014/53/EU

Standards:

E27 light socket

IEC 60238:2016+AMD1:2017 Edison screw lamp holders:
EN IEC 61058-1:2018
EN 61058-1-2:2016
ETSI EN 301 489-1 V2.2.3 (2019-11)
ETSI EN 301 489-3 V2.3.2 (2023-01)
ETSI EN 300 220-1 V3.1.1 (2017-02)
ETSI EN 300 220-2 V3.2.1 (2018-06)
EN 50663:2017
EN 62479:2010

Remote control

EN IEC 62368-1:2024+A11:2024
EN 50663:2017
EN 62479:2010
ETSI EN 301 489-1 V2.2.3 (2019-11)
ETSI EN 301 489-3 V2.3.2 (2023-01)
ETSI EN 300 220-1 V3.1.1 (2017-02)
ETSI EN 300 220-2 V3.2.1 (2018-06)

Tours, 23/07/2026
Alexandre Chaverot, CEO



EXT3L

CASA

19 avenue Marcel Dassault
ZAC des Deux Lions - 37200 Tours - France
www.avidsen.com

Photographs and illustrations non-binding/ ©StorySet/©AdobeStock.com/© Avidsen France 2026