CASA



CASA

HOTLINE

2 YEARS WARRANTY

EXTEL

V1

Remote control for 433 MHz receivers and sockets

Ref. 701209

EN



INSTALLATION AND USER MANUAL





Thank you for purchasing **the remote control for your Extel CASA 433 MHz receiver or socket.**

1 - OPERATING PRECAUTIONS

- Do not allow children to operate the product.
- This product is designed exclusively for indoor use.
- This product is designed for use with EXTEL CASA products.
- Do not install near acidic chemicals, ammonia or sources of toxic gases.
- Do not install near other electronic devices such as computers, televisions or video recorders.

2 - MAINTENANCE AND CLEANING

- Use a soft, slightly damp cloth to clean your product.
- Do not use abrasive or corrosive substances.
- Do not spray any products directly onto the unit

3 - RECYCLING



The disposal of used batteries in household waste is strictly forbidden. Batteries/accumulators containing harmful substances are marked with symbols (shown opposite) which indicate that it is forbidden to discard them in the household waste. The corresponding heavy metals are referred to as follows: Cd = cadmium, Hg = mercury, Pb = lead. You can dispose of these used batteries/accumulators at local waste facilities (centres for sorting recyclable materials), which are required to accept them. Keep batteries/button cells/accumulators out of reach of children and store them in a safe place not accessible to them. They could be swallowed by children or pets. Risk of death! In the event that a battery is swallowed, consult a doctor or go to A&E immediately. Never short-circuit the batteries, and do not burn or recharge them, as they may explode!




This symbol means that devices no longer in use should not be disposed of with household waste. The hazardous substances they may contain can be harmful to health and the environment. Return the equipment to your local distributor or use the recycling collection service provided by your local council.



B - KIT CONTENTS


1 x4

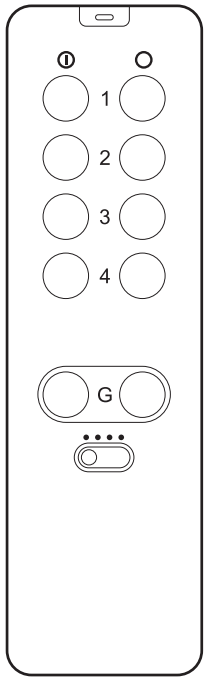


2 x1




1	433 MHz remote control - 16 channels
2	CR2032 battery

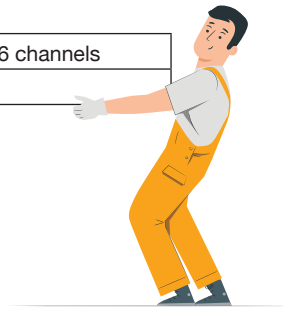


C - PRODUCT DESCRIPTION

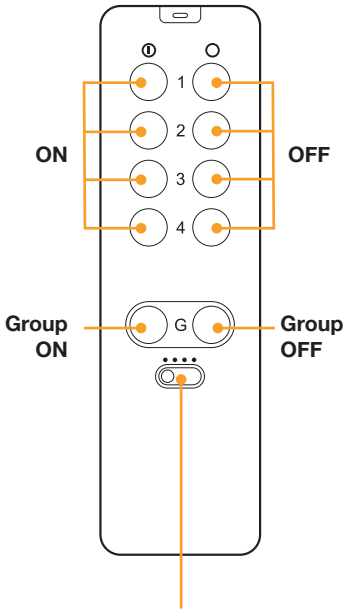

4-page selector with 4 channels, making a total of 16 channels

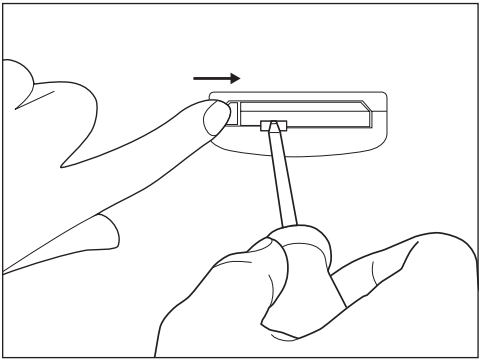


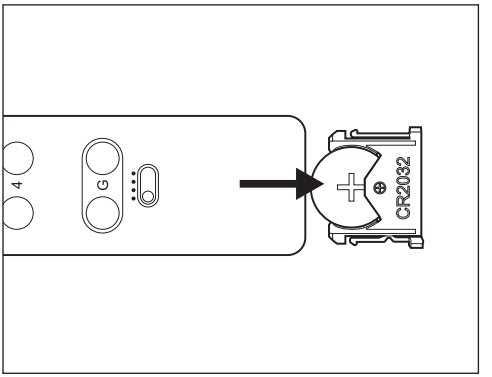

Remove the battery pull tab before using the device for the first time, or replace the 3 V CR2032 battery when it is running low. Close the battery compartment.

D - FITTING THE BATTERY INTO THE REMOTE CONTROL


Before using the remote control for the first time, you need to remove the insulator pad from the battery. To do this, first press your finger against the battery compartment slider, whilst inserting a flat-head screwdriver into the slot provided on the outside of the compartment. Apply gentle pressure to the compartment and lift it up to open it.

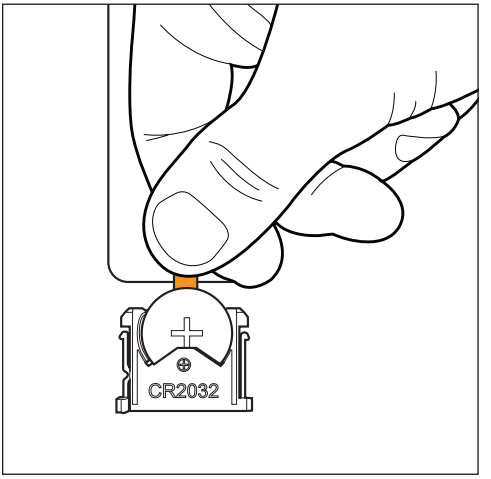

E - PROCEDURE FOR PAIRING AND UNPAIRING THE REMOTE CONTROL WITH/ FROM OTHER PRODUCTS IN THE CASA RANGE

1. PAIRING: WITH A REMOTE-CONTROLLED SOCKET:

1. Plug the remote-controlled socket into an electrical outlet.

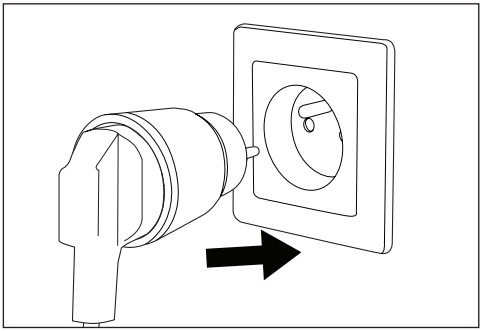

2. Within 6 seconds, press the **"'ON"** button once for the desired channel of the wireless remote control to pair it with said channel. The socket relay will click twice to confirm that the remote control has been paired.

2. TO DELETE THE REMOTE CONTROL FROM THE SOCKET'S MEMORY:

1. Unplug the remote-controlled socket for at least 6 seconds.

2. Plug the remote-controlled socket back in.

3. Within 6 seconds, press the **"OFF"** button once for the channel you wish to unpair. The socket relay will click twice to confirm that the remote control has been deleted from memory.

3. TO PAIR THE REMOTE CONTROL WITH A MODULE:

1. On the module, press the **"Learn"** button once (the LED on the receiver will flash). This will enable learning mode.

2. On the wireless remote control, press the **"ON"** button once for the desired channel to pair it. The green LED on the remote control will flash and the LED on the receiver will flash twice to confirm that pairing has been successfully completed.

4. TO DELETE THE REMOTE CONTROL FROM THE MODULE'S MEMORY:

1. On the module, press the "Learn" button once (the LED on the receiver will flash). This will take you into learning mode.


2. On the wireless remote control, press the **"OFF"** button once for the channel you wish to unpair. The green LED on the remote control will flash and the LED on the module will flash twice to confirm that the remote control has been deleted from the receiver's memory.

F - OPERATING THE REMOTE CONTROL WITH CASA RECEIVERS

ON/OFF OPERATION


a) To switch on the receiver load:

1. Press the **"ON"** button once for the channel paired with the product(s) on the remote control. The green LED on the remote control will flash when the command is being sent to the paired receiver(s).

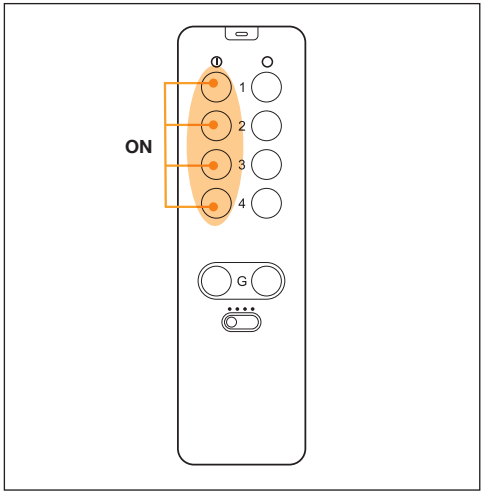


b) To switch off the receiver:

1. Press the **"OFF"** button once for the channel paired with the product(s) on the remote control.
The green LED on the remote control will flash when the command is being sent to the paired receiver(s).

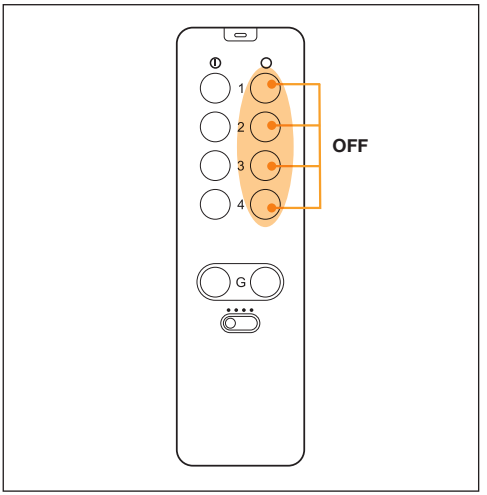

GROUPED ON/OFF OPERATION


To control the paired receivers on all 16 channels simultaneously, simply press the Grouped ON or Grouped OFF button.

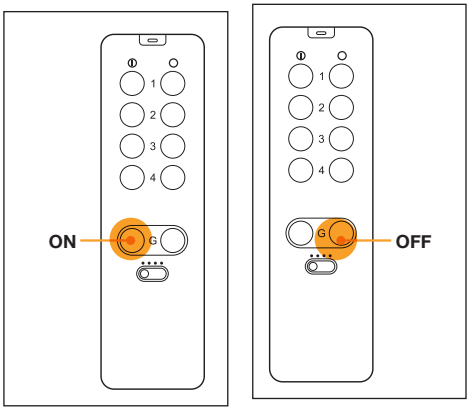

To switch on all paired receivers, press the **"I channel G"** button on the remote control once.
To switch off all paired receivers, press the "**O channel G"** button on the remote control once.


OPERATING THE PAGE SELECTOR

To access the various channel pages, use the selector at the bottom of the remote control. Drag the selector horizontally to browse through the available pages (4 pages). Each notch on the selector corresponds with a page, and each page has 4 different channels.

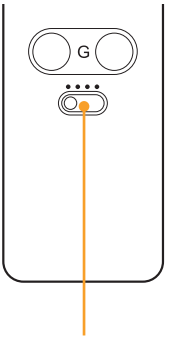


4-page selector with 4 channels, making a total of 16 channels

G - TECHNICAL SPECIFICATIONS

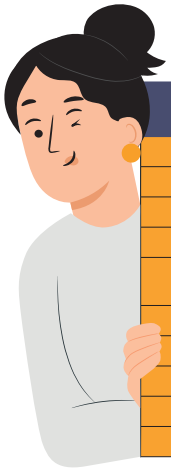

TECHNICAL SPECIFICATIONS OF THE REMOTE CONTROL	
DISTANCE	50 m in open space
FREQUENCY	433.92 MHz
MAX RADIO POWER	ERP 10 dBm
USE	Indoor and outdoor
OPERATION	16 channels 1 master control
POWER SUPPLY	Runs on one 3 V CR2032 battery (included).
DIMENSIONS	Height 130 mm x Width 38 mm x Thickness 12.5 mm
WEIGHT	51 g
OPERATING TEMPERATURE RANGE	0 to 35°C:
STANDARD AND CERTIFICATION	CE, RoHS

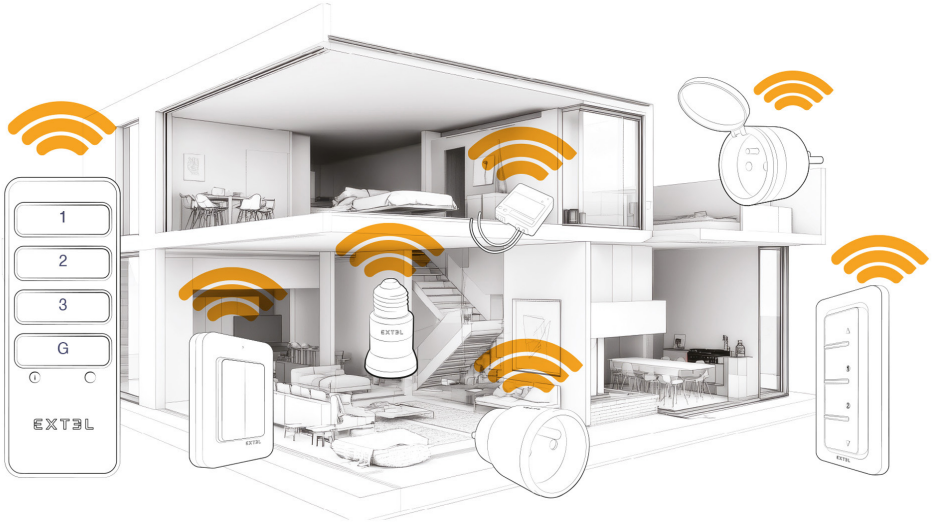

H - WARRANTY

1 - WARRANTY

- The warranty is void if parts have been dismantled. Clean the outside with a soft, dry cloth only.
Before cleaning, disconnect or switch off the device.

PLEASE NOTE
- Do not use any carboxylic acid, alcohol, or similar chemicals on the product. In addition to damaging your device, the fumes are also hazardous to your health and are explosive.
- Do not use any tool that can conduct voltage (wire brush, sharp tool, etc.) for cleaning.

If needed, visit our technical website: ***www.avidsen.com***

Download the latest version of the instructions in colour from: ***www.avidsen.com***

2 - WARRANTY CONDITIONS

- This product is guaranteed for parts and labour in our workshops.
- The warranty does not cover: consumables (batteries, etc.) and damage caused by misuse, improper use, improper installation, external intervention, damage due to physical or electrical shocks, dropping or atmospheric phenomena.
- Do not open the device, as this will void the warranty.
- Clean with a soft cloth only, no solvents. The warranty is void if parts have been dismantled. Clean the outside with a soft dry cloth only. Before cleaning, disconnect the equipment or switch it off at the mains.
- The receipt or invoice is proof of purchase date.

If you experience any issues, please visit:
www.avidsen.com — Support section

I - DECLARATION OF CONFORMITY



Avidsen, undersigned, states that radio equipment such as the EXTEL CASA 701209 is compliant with Directive 2014/53/EU

Standards:

Remote control
EN IEC 62368-1:2024 + A11:2024
ETSI EN 300 220-1 V3.1.1 (2017-02)
ETSI EN 300 220-2 V3.2.1 (2018-06)
EN 50663:2017
EN 62479:2010
ETSI EN 301 489-1 V2.2.3 (2019-11)
ETSI EN 301 489-3 V2.3.2 (2023-01)

Tours, 23/07/2026
Alexandre Chaverot, CEO



EXT3L

CASA

19 avenue Marcel Dassault
ZAC des Deux Lions - 37200 Tours - France
www.avidsen.com

Photographs and illustrations non-binding/ ©StorySet/©AdobeStock.com/© Avidsen France 2026